

## Oil Flow Renovator

Art.: 04.0182.9999

Tin bottle 300 ml

Oil Flow Renovator is an oil additive for internal cleaning of the engine. It prevents (premature) contamination of fresh oil.

This unique additive is intended to be added to the engine oil before the oil change. The active ingredients ensure that upon draining, as much internal contamination as possible is removed from the oil system along with the engine oil to be changed.

When the engine is running, combustion residues, sediment and wear particles (metal) deposit in the oil system. These deposits occur under the valve cover, on the cylinder head, in the hydraulic valve lifters, in the oil passages and in the corners of the crankcase.

Adding Oil Flow Renovator 15 minutes before oil drainage (with a hot engine idling) will loosen and encapsulate the contaminants so they will be drained away with the old engine oil. When cleaning the oil system in this way, fresh oil is polluted less quickly and can continue to perform optimally for much longer.

- Loosens carbon deposits, impurities and sediment.
- Keeps the contamination dissolved and prevents accumulation.
- Cleans the hydraulic valve lifters.
- Applicable for petrol, LPG and diesel engines with or without turbo.
- Not harmful to soot filters and catalytic converters.

